
EJ-FLP Series

Expansion joint cover for floors Floor to floor condition

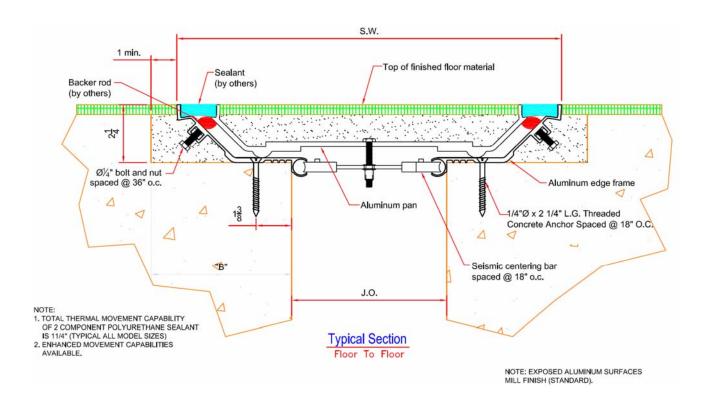

				Dime	ension (Chart						
Model	Joint Opening (J.O.)						Total Seismic		S.W.		В	
	at install		allow min.		allow max.		Movement		at install		(min)	
	inches	m m	inches	mm	inches	m m	inches	mm	inches	m m	inches	m m
-FLP-400	4	100	1 1/4	32	6	152	4 3/4	121	12 7/8	327	6	152
-FLP-600	6	152	1 1/4	32	9	229	7 3/4	197	14 7/8	378	6	152
-FLP-800	8	203	1 1/4	32	12	305	10 3/4	273	18 7/8	479	7	178
-FLP-1000	10	254	1 1/4	32	15	381	13 3/4	349	20 7/8	530	7	178
-FLP-1200	12	305	1 1/4	32	18	457	16 3/4	425	23 7/8	606	7	178
-FLP-1600	16	406	1 1/4	32	24	610	22 3/4	578	29 7/8	759	8	203
-FLP-1800	18	457	1 1/4	32	27	686	25 3/4	654	34 7/8	886	10	254

