

COATED NON-PRECOMPRESSED CLOSED CELL FOAM SYSTEM - RECESSED APPLICATION

MODEL(S): ESV

ESV Wall, Floor, or Ceiling System – 1/2” Through 10” Sizes



GENERAL DESCRIPTION

The Nystrom Vertical or Horizontal Non-Precompressed Closed Cell Foam System is designed to provide a permanent weather tight seal.

GENERAL SAFETY PRECAUTIONS Improper selection, installation, or use can cause personal injury or property damage. It is solely the responsibility of the user, through their own analysis, to select products suitable to the specific application requirements, ensure proper maintenance and use as intended. Follow local, state, and federal regulations for proper installation and operation requirements.

Introduction + Safety

Please read the complete instructions carefully before beginning any work. To ensure proper installation and performance of the product, the following actions must be completed by the installing contractor. Failure to do so will affect the product warranty.

Transportation + Storage

- Inspect all shipments and materials for missing or damaged components and hardware.
- Material must be stored in a clean, climate-controlled, dry location.

Preparation

- Locate the packing slip(s) and/or shop drawings.
- Verify that all products listed on the packing slip are included in the package.
- Check the products for damage. If products are damaged, report a freight claim immediately and leave the products in their packaging. If you sign for products without reporting damage, you waive your right to a freight claim and will be responsible for their replacement cost.
- Read the instructions thoroughly before beginning installation.

Tool List

- Tape measure
- Serrated-edge knives
- Acetone or isopropyl alcohol, lint free rags & a clean paint bucket
- Caulking gun & caulk knives
- Spray bottle filled with water
- Chemical-resistant gloves
- Broom & dustpan or vacuum
- Level
- Blue painters tape and/or duct tape
- 6" caulkers knife
- Ø1-1/2" "jiffy-mixer"
- Spatula to scrape epox

Environmental Storage Requirements

- Cold Days: Store materials off the floor in a clean, dry location, inside above 68°F (20 °C) for a minimum of 64 hours prior to installation. Product will recover slower when it's cold and faster when its warm.
- Very Hot Days: Keep materials in a clean, dry location and out of direct sunlight when the temperature is greater than 60°F until immediately prior to installation of joint. Do not store material in an enclosed container where temperatures exceed 100 °F (38 °C).


Sidewall Adhesive information for Vertical Joints

For vertical joints, sidewall adhesives are required as they support joint performance.

Preinstallation

1. Ensure joint faces area parallel and have sufficient depth to receive the full depth of the EJN-ESV product being installed plus at least ¼" [6mm] for the application of corner beads, as shown on the shop drawings.
2. Repair spalled irregular or unsound joint surfaces using accepted industry practices for repair of the substrates in question. Remove protruding roughness to ensure joint sides are smooth.
3. Remove all residues of old sealants. Wire brush or angle grind, if necessary, to clean sides.
4. Wipe joint faces with lint-free rags dipped in solvent or other agent suitable for use on the substrates in question to a depth of the seal material plus 1" (25mm) to ensure joint sides are free of dust or cleaning agent prior to installation.

5. Ensure joint sides are dry of solvent or cleaning agent PRIOR to installation.
6. Tape front 1/2" of joint opening (see Figure "A" below) both sides, to prohibit epoxy / supplied adhesive accessory from this area. Failure to stop epoxy from landing in this area will restrict foam seal from optimal movement.

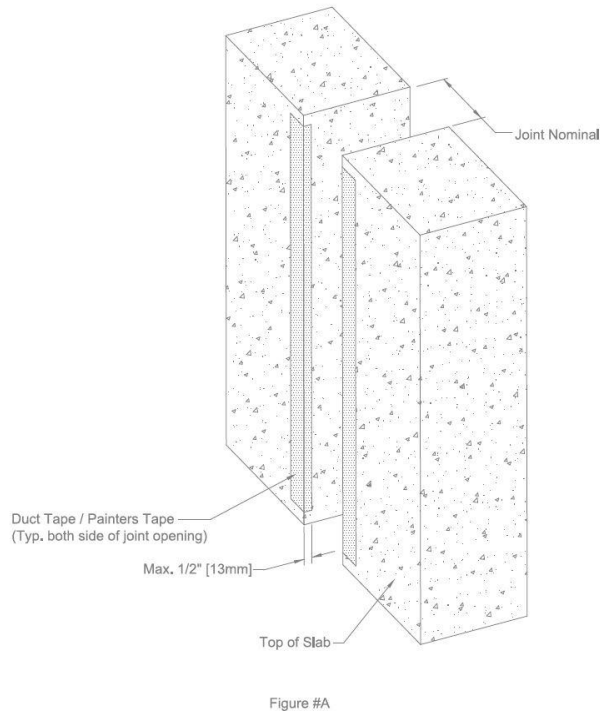

Foam and accessory materials:

1. Keep material warm (~70° F) for 24 hours before installation.
2. Tape the top of the joints ahead of time (will help avoid bad installs). Epoxy / adhesive accessories / sealant accessories on ribbed face of joint will restrict movement.
3. Use (1) thickness of the 1/4" MDF sideboard and run along joint to ensure a consistent 1/4" recess.

INSTALLATION (EJN-ESV ONLY)


1. Find and open the correct box.
 - Material has been supplied to your mean-temperature field measurement of joint widths. Joint widths for material supplied are marked at the end of each box.
 - Find the correct box and open it.

- Compare material width marked on each stick against joint width.
- The actual material width measured between the hardboard will be slightly less than the indicated joint width. If unsure of correct material selection, consult Nystrom immediately.

2. DO NOT REMOVE outer plastic packing until you read the rest of these instructions.

- Proper performance of expansion seals necessitates proper installation beginning through completion.
- Failure to follow these instructions may result in system failure and warranty issues.

- 3. Use a miter saw to make any cuts for transitions or splices BEFORE removing the outer plastic packaging. All starting and ending pieces must be square to the termination point. IMPORTANT: Do not remove outer plastic packaging until you are ready to install the material in the joint opening – See Step #11.**

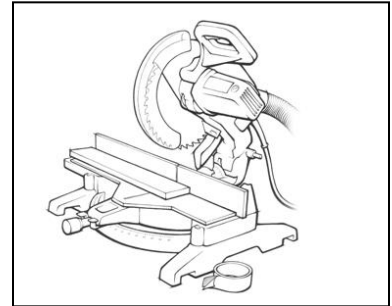

- 4. For installations 4” (102mm) or smaller** proceed to Step #9.

- 5. For installations 4.25” (108mm) or greater** epoxy adhesive is required. Follow next steps and read *epoxy notes* entirely before mixing epoxy adhesive.

6. Epoxy notes:

- Mix only the required amount of epoxy adhesive that will be used within 30 minutes.
- Application and surface temperatures should be at least 40°F (4 °C) & rising.
- Greater volume = less time to cure, smaller volume = more time to cure.
- As ambient temperatures increase, epoxy adhesive cures twice as fast.
- As ambient temperatures decrease, epoxy adhesive cures half as fast.
- To increase the pot life of the epoxy adhesive, split up the mixed material into smaller units.
- Epoxy adhesive must be wet upon installation of EJN-ESV. As shown above, the working time is approximately 30 minutes, temperature dependent.

- If epoxy adhesive hardens prior to installation, another coat may be applied within 8 hours. After 8 hours, the joint surface must be abraded prior to recoating with the epoxy adhesive.
- If the entire contents of containers are not required, reseal each container and store as defined on page 2, allowing epoxy to be stored and/or reused at another installation.

7. To mix epoxy adhesive:

- Mix part A and part B separately.
- Transfer enough contents of part A for the current installation into a clean container. Form a “bowl” of part A material in the clean container by pulling some part A material up the inside of the container, this will greatly aid in the mixing of parts A & B together as part B may stick to the sides of the container. Then transfer the equal parts of part B into the same container. Mix the combined material thoroughly with a low-speed drill or jiffy mixer. Mix until the black and white colors combine and there are no remaining streaks of either color.
- Transfer the combined material into a new clean container to prevent unmixed residue from contaminating the final mixture.

8. Apply epoxy adhesive to substrate:

- Begin installation at the bottom of the joint and work upward.
- Apply a $\frac{1}{16}$ ” to $\frac{1}{8}$ ” coating of epoxy adhesive to both sides of the substrate using a margin trowel or gloved hand to the depth of the foam plus $\frac{1}{2}$ ” (13mm). The epoxy adhesive must be wet upon the installation of the EJM-ESV foam. **See Figure #1.** (Next page)
- Once epoxy adhesive is applied, proceed to Step #11.

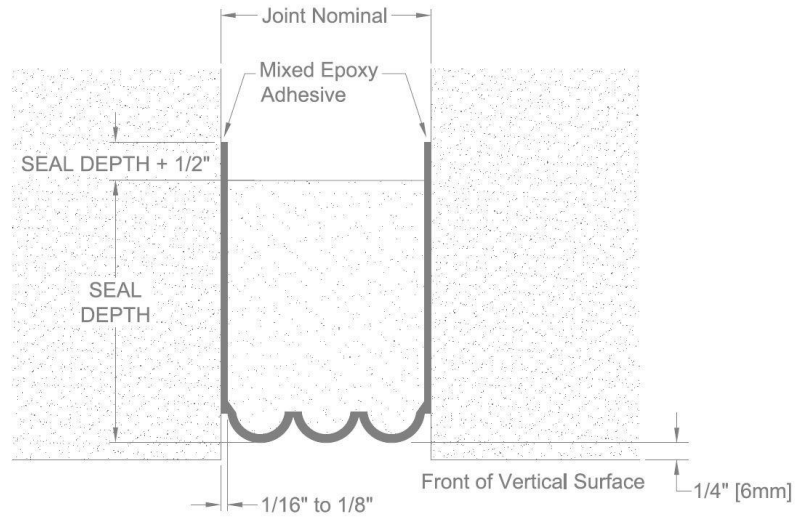


Figure #1

9. For installations without epoxy adhesive (4" or less), apply a 1/4" (6mm) bead of the supplied silicone adhesive along both sides of the joint wall, approximately 1/2" - 3/4" (13mm-19mm) back from the front surface of the substrate. **See Figure #2.**

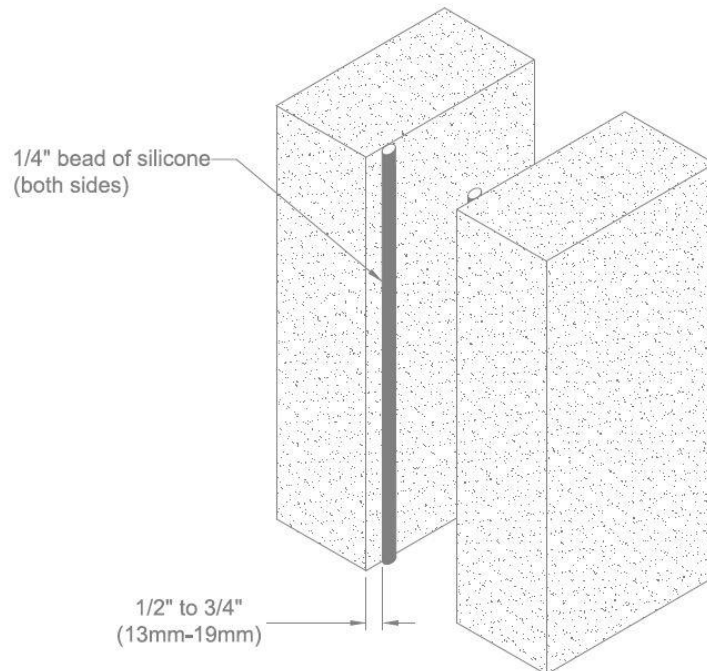


Figure #2

10. Begin installation of the silicone at the bottom of the joint and work upward.

11. When ready to install the foam, open the plastic packaging by:

- The foam seal is held by hardwood and plastic wrapping. When ready to install, slit the plastic wrapping by cutting along the hardboard and inner release liner.
- DO NOT CUT ALONG SILICONE-COATING FACE. YOU MAY CUT THROUGH IT, THUS DAMAGING THE SEAL.
- Remove the plastic packaging and the hardboard from both sides of the foam.
- Once the packaging is removed, you can start installing the product. Since this product is larger than the joint opening, additional force will be required to put the foam into position.

12. Installing the foam:

- Place the material into the joint opening while gently pushing the adhesive against the side of the opening. The silicone coating of the foam should be placed at a minimum of ¼” (6mm) behind the substrate surface. Use the ¼” MDF as discussed in preinstallation: Foam on page 3.
- Feed material into joint, working sequentially in one direction starting at the bottom of the joint.
- Always push material – DO NOT PULL IT – to prevent stretching (start at bottom of wall and work up).
- Once the material is in place, use a clean margin trowel to firmly press the adhesive into the substrate.
- *FOR EJN-ESV smaller than 4” (102mm) TIP: if material binds, spray the caulking knife and/or self-adhesive with water from the spray bottle to help slide into joint gap.*
- If necessary, use small – approx. 3” – pieces of used hardboard packing as wedges to hold sections in place as they expand.
- Allow 72 hours for epoxy adhesive to cure. Note: As mentioned in Step #4, ambient temperature change can affect cure time.

13. If splicing is required, select the piece of EJN-ESV to be spliced. To ensure proper fit and provide compression at splices, cut the final piece of foam for each run including a ¼ - ½” (6-13mm) overlap. Verify both ends are cut square – refer to Step #3. Apply a minimum of ¼” (6mm) bead of sealant to the mating end of the foam to be installed. **See Figure #3.** Firmly compress new foam seal and foam seal already installed in joint opening.

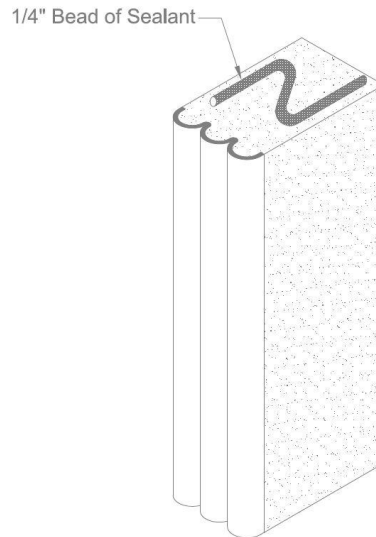


Figure #3

14. Joining successive lengths:

- Insert the first piece of material as described in Step #12 but leave the end protruding up and out of joint.
- Place end of next section against end of first piece (joint #1). Push hard to compress the joint firmly together.
- Leaving joint just made protruding from joint; insert the rest of this section of material into joint.
- Finally push protruding joint section into joint #2.

15. Remove duct tape/ painters tape from the vertical surface and what was draped inside the joint opening prior to adhesive kick (typically less than 30 minutes from time of sidewall adhesive installation). Remove any excess epoxy.


16. Apply sealant to edge of facing:

- Once all foam seals are installed, tool silicone over all seams and transitions using a small caulking tool. Evenly spread the silicone on exposed seams for a clean, aesthetically pleasing finish. Fill in any holes or voids in seams with the silicone to fill and seal the joint.

17. Install corner beads:

- Corner beads are required with EJV-ESV.
- Wait until material is expanded fully against both sides of the joint.
- Ensure that material and joint sales are dry if water spray is used to facilitate installation.
- Place a caulking bead where the sealant meets the substrate.
- Tool the corner bead firmly against the substrate and silicone facing.
- Note: less is more here. Only a small bead of silicone is required between the inside surface of the joint opening and the first foam below. Too much silicone will prohibit foam movement.

18. Direction changes:

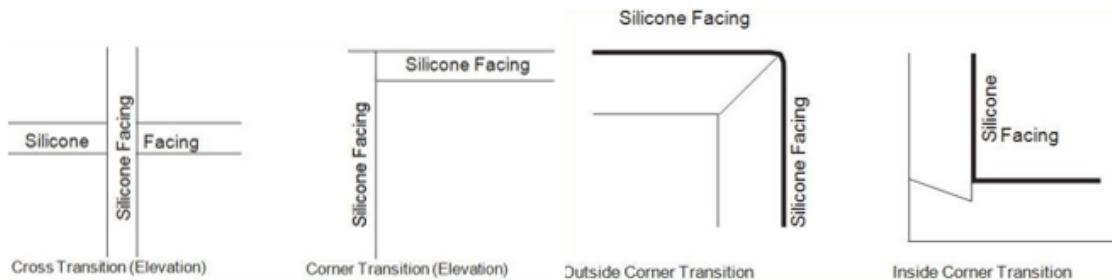

OPERATION

Expansion Joints are designed and built for years of dependable service.

MAINTENANCE

Perform annual inspections to make sure the system is in position; all components are tight and in place and there is no impedance of joint movement. Repair and/or replace as needed.

QUESTIONS?

For more information on installation, repair, or replacement, please contact Customer & Sales Support at 800-547-2635 or visit nystrom.com